

EZ Tube

INSTALLATION STEPS

Modern appearance, stable quality, practicability & multiformity
Package and spotlight are available as accessories

STEP 1


2280 Front
3000 Top
Frame size: W3000mm x H2280mm

CONNECT


PRESS

If can't snap when dismantle the frame, Pls push the tube forwardly, then push again.

STEP 2

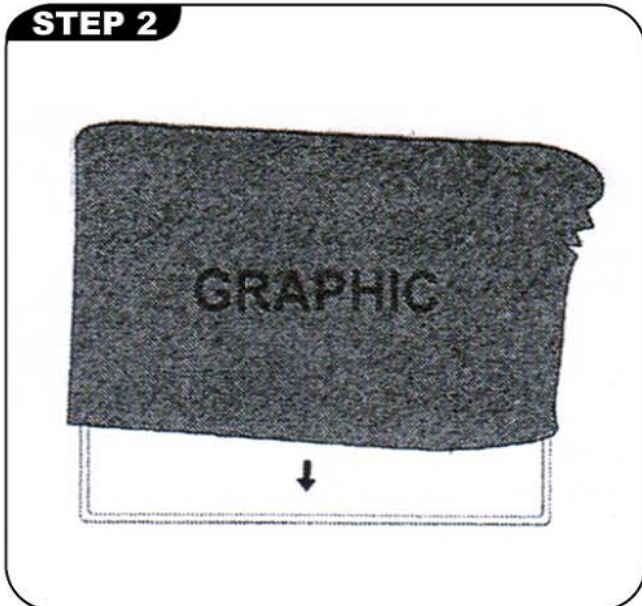

STEP 3

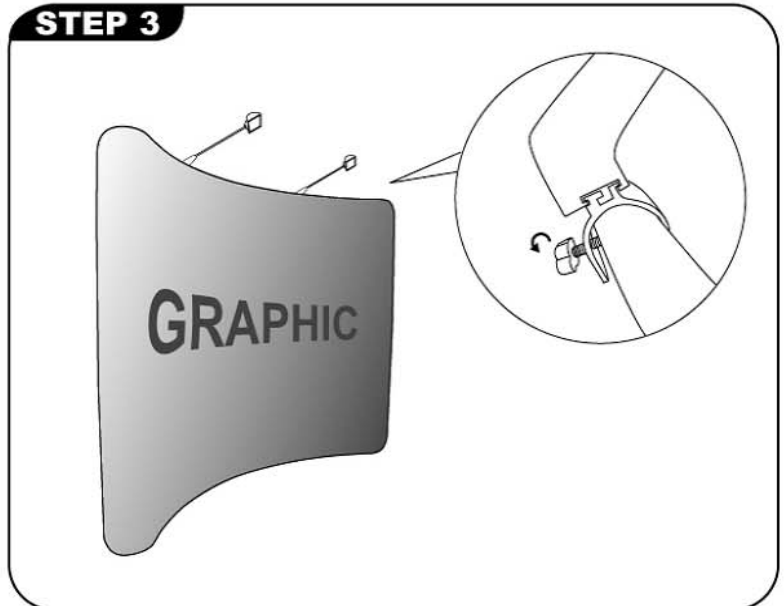

CAUTION:
PLEASE READ THE INSTRUCTIONS BEFORE INSTALLING PRODUCTS